GEFRAN

GTZ 25 / 40 / 55

THREE-PHASE SOLID STATE RELAYS WITH LOGIC CONTROL Vdc / Vac



Main features

- · Control input from VDC/VAC logic signal
- 3-phase alternating current solid state relay with integrated hestsink
- · Zero crossing switching
- 3-phase nominal current 3x25/40/55A
- · Nominal voltage up to 600VCArms
- Integrated SCR thermal protection with LED signal
- Optional alarm output (for interrupted load diagnostics or for SCR overtemperature
- Optoinsulation (input/output) 4000Vrms
- Integrated overvoltage suppressor
- Non-repetitive voltage up to 1200Vp
- Component selection to operate at max. declared current with ≤ 40°C temperature
- DIN bar mounting with fast clip-on
- In Conformity with EN60947-4-3 and

Main applications

- Thermoforming
- Plastic extrusion lines
- Industrial ovens and furnaces
- Heat treatments
- Control applications with high switching speed
- Mold heating/cooling control units
- Refrigeration
- Air conditioning

PROFILE

3-phase "zero crossing" power solid state unit for control of resistive and inductive loads, complete with aluminum heatsink and DIN guide connection.

Integrated device designed for industrial applications demanding control of high power levels and frequent switching, with loads up to 3x55A (AC51) at 400/480/600Vac.

Control is logic type (VDC or VAC), signaled by LEDs.

Each phase is controlled by means of semiconductors.

The constructive elements, special production process, and new, sturdy case, provide excellent reliability and continuity of service.

The device is sized for continuous operation at nominal current at room temperature of 40°C.

All versions are protected against overvoltages and against junction overtemperature, with signal LEDs and (optional) solid state alarm output.

An optional alarm output is available for interrupted load diagnostics.

The device is supplied complete with covers to protect against direct contacts (covers are removable for wiring).

Accessories available: fuses, fuse hol-

ders, support for panel mounting, thermostats and fans.

TECHNICAL DATA

General features

Category of use: AC51, AC53a

Nominal voltage (Ue):

400Vac (max. range 24...440Vac) (TRIAC) 480Vac (max. range 24..530Vac) (SCR) 600Vac (max. range 24..660Vac) (SCR)

Nominal frequency: 50/60Hz

Peak voltage:

<800Vp for models with Ue=400Vac <1200Vp for models with Ue=480Vac, Ue=600Vac

Uninterrupted nominal service.

Critical dV/dt OFF-state:

500V/ μ s for models with Ue=400Vac 1000V/ μ s for models with Ue=480Vac, Ue=600Vac

Switching voltage for zero: < 20V

Activation time: ≤1/2 cycle Deactivation time: ≤1/2 cycle

Potential drop at rated current: ≤ 1,4Vrms

IP20 protection

Weight:

GTZ 25:1100g GTZ 40, 55:1350g

Control inputs

DC INPUT (Type "D"):

Voltage of command circuit (Uc): 5..32Vdc

Activation voltage: >4.5Vdc Deactivation voltage: <3Vdc

Max. input: 18mA@5Vdc- 22mA@32Vdc

Max. reverse voltage: 36Vdc

AC INPUT (Type "A"):

Control voltage: 20...260Vac/Vdc Activation voltage: > 15Vac/Vdc Deactivation voltage: < 6Vac/Vdc

Current draw:

<= 8 mAac/dc@260Vac/Vdc

Additional fuse (3A max) shall be installed on the control input circuit.

Outputs

GTZ 25/...

Nominal current (Imax):

AC51: 3x25 A AC53a: 3x5 A

GTZ 40/...

Nominal current (Imax):

AC51: 3x40 A AC53a: 3x8 A

GTZ 55/...

Nominal current (Imax):

AC51: 3x55 A AC53a: 3x15 A

Insulation

Nominal insulation voltage input/output: 2.5KV ac for models with Ue=400Vac

4KV ac for models with Ue=480Vac, Ue=600Vac

Nominal impulse withstand voltage (Uimp): 2500Vac

Ambient conditions

Working temperature: -20°C...80°C
Max. relative humidity: 50% to 40°C
Max. installation altitude: 2000 slm

· Pollution level: 2

• Storage temperature: -20...85°C

Class: A (industrial device)

Suitable for use in pollution degree 2 environmental

Thermal protection

SCR temperature is constantly monitored inside the device.

If the maximum temperature limit is exceeded (T=110°C), current to the load is interrupted and the yellow signal LED lights up.

Options

Option -1

(Thermal protection alarm output).

The alarm output option activates closing of an isolated contact (max 32VAC/VDC, 150mA, conducting resistance <=15 ohm) when it detects the following fault condition: control signal active but SCR/heatsink is in overtemperature (GTZ thermal protection)

Option -2

(Thermal protection alarm output and interrupted load).

Only for GTZ with Type "A" input.

The alarm output option activates closing of an isolated contact (max 32VAC/VDC, 150mA, conducting resistance <=15 ohm) when it detects the following fault conditions:

- Control signal active but no current in at least one three-phase branch (interrupted load)
- Control signal active but no power line voltage (no line)
- Control signal active but SCR / heatsink is in overtemperature (GTZ thermal protection). Maximum delay in tripping of load interrupt

alarm < 400ms.

Maximum length of wires between GS and load for correct operation of load diagnostics < 25m

Power supply


Fan supply (only for models GTZ 40/55A): 230Vac 14W (VEN90) 115Vac 14W (VEN91) 24Vdc 4W (VEN92)

Installation notes

Use the high speed fuses specified in the catalog according to the connection example provided.

Applications with solid state power units must also include an automatic safety switch to cut out the load power line.


FACEPLATE DESCRIPTION GTZ with DC control (Models GTZ-xx/xx-D-x)

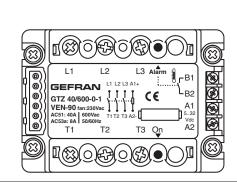

L1: Phase 1 input L2: Phase 2 input L3: Phase 3 input T1: Phase 1 output T2: Phase 2 output T3: Phase 3 output A1: Control signal (+) A2: Control signal (-) B1: Alarm output (option) B2: Alarm output (option) Led ON: Red led signal indicator

Led Alarm: Yellow led (alarm overtemperature junction)

FACEPLATE DESCRIPTION GTZ with AC control (Models GTZ-xx/xx-A-x)

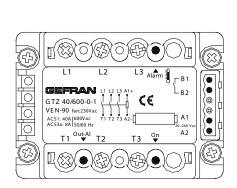

Phase 1 input 11. L2: Phase 2 input L3: Phase 3 input T1: Phase 1 output T2: Phase 2 output T3: Phase 3 output Control signal (AC) A1: Control signal (AC) A2: B1: Alarm output (option) R2· Alarm output (option) Led ON: Red led signal indicator

Led Alarm: Yellow led (alarm overtemperature junction)
Led OUT-AL: Red Led interrupted load alarm (with option 2 only)

For maximum reliability, the device MUST be installed correctly in the panel in order to have adequate heat exchange between the heatsink and the surrounding air under conditions of natural convection.

Mount it vertically (max.10 inclination from the vertical axis)

- Vertical distance between a heatsink and the panel wall >100mm
- Horizontal distance between a heatsink and the panel wall: 20mm at least
- Vertical distance between two heatsink: 300mm at least.
- Horizontal distance between two heatsink: 20mm, at least

Check that cable raceways do not reduce these distances; should it happen, mount the GTZ overhanging from the panel, so that the air can flow vertically on the heatsink without obstables.

- Maximum surrounding air temperature 40°C (for UL).
- · Open type equipment

Limits of use

- dissipation of thermal power of device with restrictions on temperature of installation site.
- requires exchange with outside air or an air conditioner to transfer dissipated power outside the panel.
- installation requirements (distances between devices to guarantee dissipation under conditions of natural convection)


- max. voltage limits and derivative of transients in line, for which the solid state unit has internal protection devices.
- presence of dispersion current < 10mA (max. value with rated voltage and junction temperature of 125°C).

TECHNICAL DATA OF THE MAIN CIRCUIT

Model	Imax le (*) [Arms]	Non-repetitive overcurrent t=20ms [A]	l²t [A²s]	
GTZ 25/400	3x25	250	450	
GTZ 25/480	3x25	400	645	
GTZ 40/480	3x40	600	1010	
GTZ 55/480	3x55	1150	6600	
GTZ 40/600	3x40	600	1010	
GTZ 55/600	3x55	1150	6600	
(*) In - Nominal current (Standard CELEN 60047.4.2)				

der conditions of natural convection) (*) le = Nominal current (Standard CEI EN 60947-4-3)


DIMENSIONS

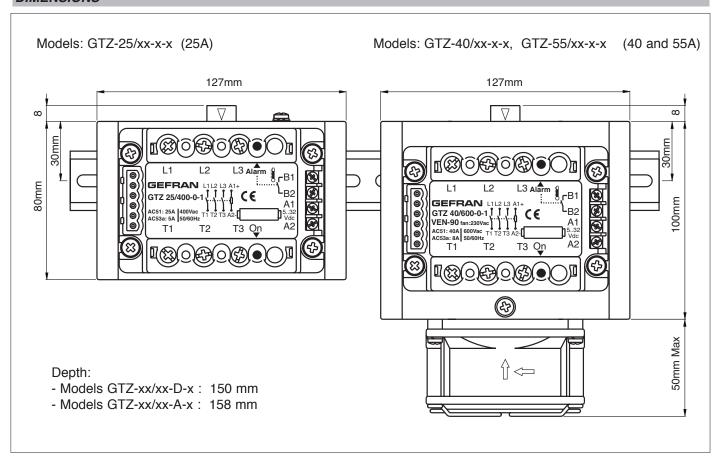

TYPE OF OPERATION


ALARM OPTION – DC INPUT: FUNCTIONAL DIAGRAM:

THERMAL PROTECTION ALARM

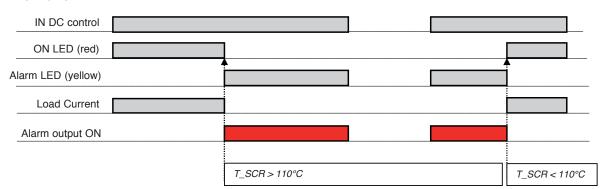


ALARM OPTION - AC INPUT: FUNCTIONAL DIAGRAM


THERMAL PROTECTION ALARM

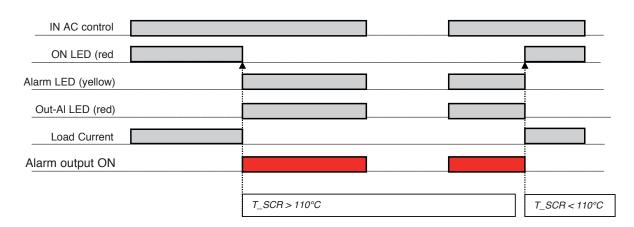


INTERRUPTED LOAD ALARM

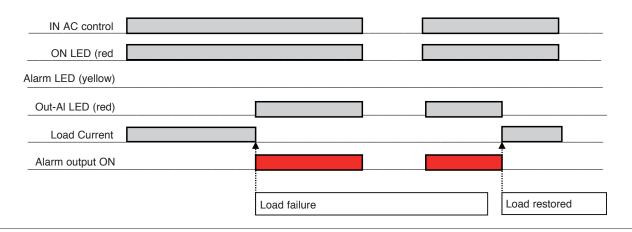

DISSIPATION DIAGRAMS

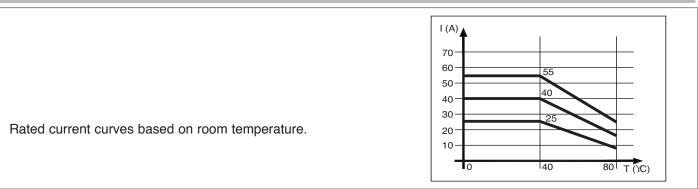

CONNECTION EXAMPLES - GTZ with DC control (Models GTZ-xx/xx-D-x)

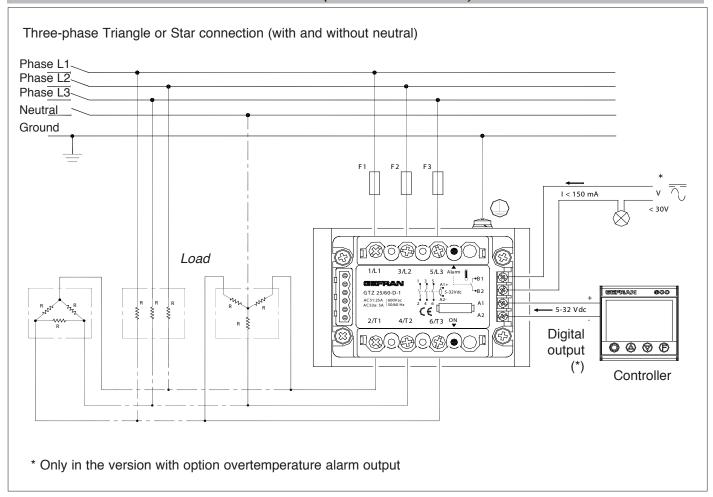

CONNECTION EXAMPLES - GTZ with AC control (Models GTZ-xx/xx-A-x)

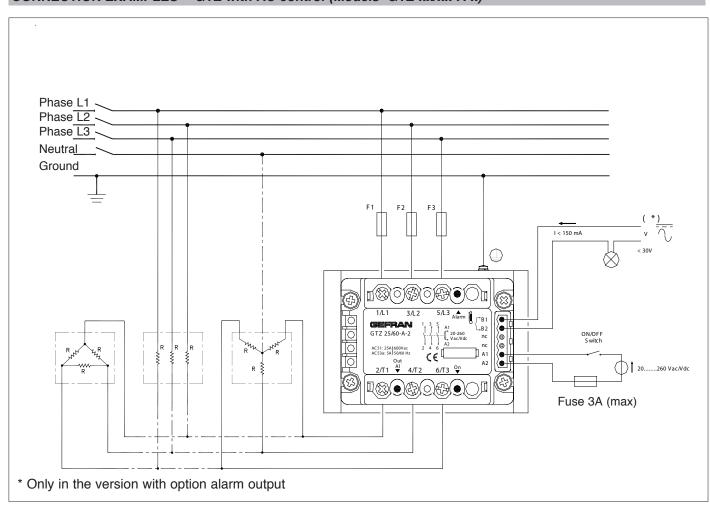


TABLE OF TERMINALS AND CONDUCTORS

	I/O Control terminal (A1, A2, B1, B2)			Power terminal (L1, L2, L3, T1, T2, T3)		
Model	Contact area (LxP) screw type	Type of pre-insulated crimp connector	Wire section (*)/ tightening torque	Contact area (LxP) screw type	Type of pre-insulated crimp connector	Wire section(*) / tightening torque
GTZ 2555A with DC control	6,3x9 M3	eye / fork / tip	min. 0.35 mm² max. 2,5 mm² 0,6 Nm Max			min. 1 mm² max. 10 mm² (tip)
GTZ 2555A with AC control	Plug connector 2/6 pins	Stripped wire or tip	min. 0.25 mm² max. 2,5 mm² 0,5 Nm Max	12x12 M5	eye / fork / tip	min. 1 mm² max. 16 mm² (eye/ fork)
						1,5 - 2,2 Nm

84-4-1	Ground terminal (see note)		
Model	Contact area (LxD) screw type	Wire section (*)/ tightening torque	
GTZ 2540A	Area: 7x12 mm² Screw: self-threading 3.9x12 DIN7981	min. 1 mm² max. 16 mm² 1,5-1,8 Nm	
GTZ 55A	Area: 12x12 mm² Screw: M5	min. 1 mm² max. 16 mm² 2 - 2,5 Nm	

(*) The max. sections specified refer to unipolar copper wires isolated in PVC.

Note: For the ground terminal, you have to use an eye wire terminal.

(LxP) = width x depth [mm]


The minimum acceptable nominal section based on the nominal currents of the power solid state units is given below for copper conductors isolated in PVC, under continuous operating conditions and at 40°C ambient temperature according to standards CEI 44-5, CEI 17-11, IEC 408 in accordance with EN60204-1

Nominal current	Nominal section cable on mm ²
10A	2,5
25A	6
40A	10
EE A	16

Terminal covers

If an eye terminal lug is used, the terminal covers can be removed more easily by inserting a Phillips screwdriver (max. width 3.5 mm) into the side slots.

With the point of the screwdriver, widen the side of the cover and raise it.

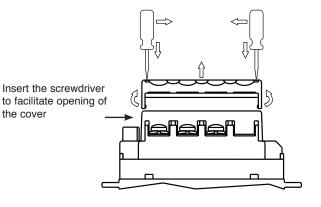


ACCESSORIES

A wide range of accessories is available heatsink, fuses and fuse holders, current transformer, supports to guide DIN, thermostats.

the cover

To choose accessories, see the section "Solid state relays - Accessories".

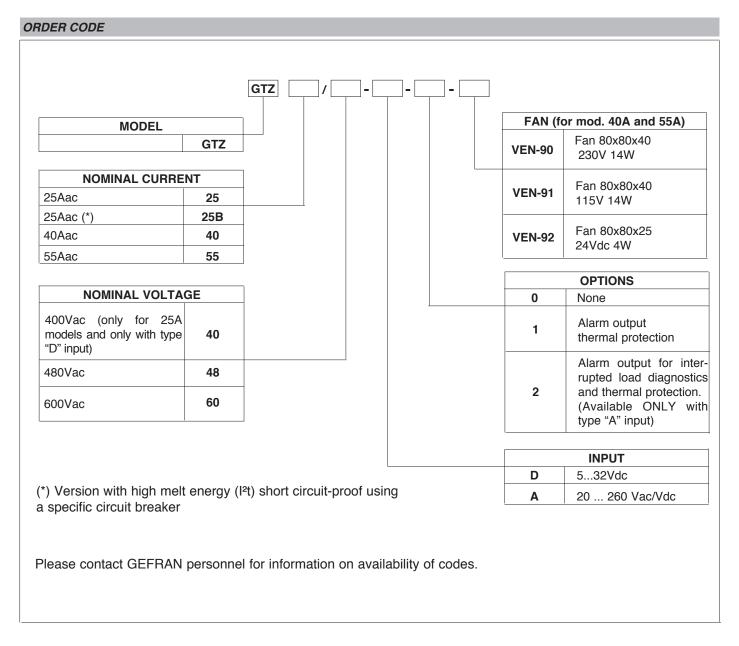

GEFRAN spa reserves the right to make any kind of design or functional modification at any moment without prior notice

·WARNINGS



WARNING: this symbol indicates danger.

Read the following warnings before installing, connecting or using the device:

If the power solid state unit is used in applications with risk of injury to people, machines, or materials, auxiliary alarm devices must be employed. It is also advisable to be able to check for tripping of alarms during normal operation;

- · follow instructions precisely when connecting the heatsink;
- · always use cables that are suitable for the voltage and current levels indicated in the technical specifications;
- DO NOT operate the device in rooms with dangerous (inflammable or explosive) atmosphere;
- During continuous operation, the heat sink can reach up to 100°C, and stays at a high temperature even after the device is turned off due to thermal inertia; therefore, DO NOT touch it and avoid contact with electrical wires;
- do not work on the power part without first disconnecting electrical power to the panel;
- · do not remove the cover when the device is powered!

Installation

- ground the heatsink connected to the power module;
- power supply lines must be separated from device input and output lines; always check that the supply voltage matches the voltage indicated on the device label;
- · avoid dust, humidity, corrosive gases and heat sources;
- respect the installation distances between one device and another (to allow for dissipation of generated heat).
- to keep air in movement, we advise you to install a fan near the GTZ group in the electrical panel containing the GTZs.;

Maintonanco

- at regular intervals, check operation of the cooling fans and clean all air ventilation filters:
- · repairs must be done out only by trained and specialized personnel. Cut power to the device before accessing internal parts.
- do not clean the box with solvents derived from hydrocarbons (trichloroethylene, gasoline, etc.). Using such solvents will compromise the device's mechanical reliability. Use a clean cloth moistened with ethyl alcohol or water to clean external parts in plastic.

Sarvica

GEFRAN has a service department.

The warranty excludes defects caused by any use not conforming to these instructions.

EHE	Conformity № TC RU C-IT.AЛ32.B.00422
CSA	Conformity C/CSA/US CoFC no. 70051156
CE	In conformity to ECC 2004/108/CE and 2006/95/CE and following modification with reference to standard EN 60947-4-3 (Low voltage equipment - AC Semiconductor starters and contactors)
UL	In Conformity with UL508 - File: E243386

